



CAFE RODS are ideal for kitchens and dining areas, where both privacy and natural light are desired. Cafe rods can be installed halfway up the window or at the top for complete window coverage.

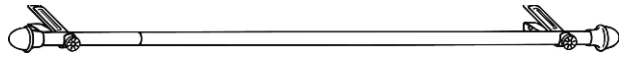


Cafe rod

Adjustable cafe rods are available in white, brass, satin nickel, bronze and black. Mounting hardware is included.

Cafe rod with Tab Curtain

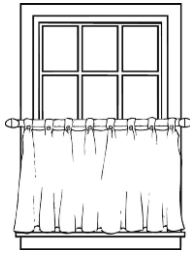


Cafe rod with Shirred Curtain

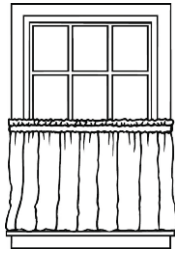

TENSION RODS can be used anywhere inside the window frame and do not require brackets. They won't leave holes or marks on your walls. This rod works best with sheers or other lightweight curtains. Tension rods slide through a simple pocket sewn into your treatment.




Tension Rod

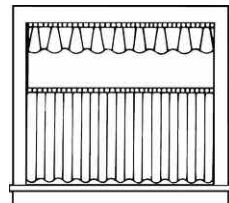

Tension rods with cafe curtains


Tension Rod Installation:

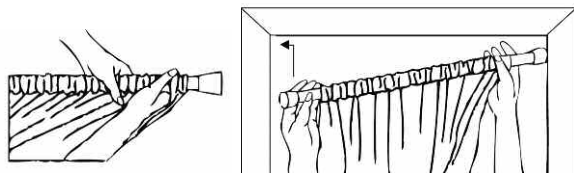


WINDOW TREATMENT TIPS:
MEASURING FOR DRAPERY HARDWARE

- Measure the width of the window treatment, taking into account if the hardware will be mounted on the wall or directly on the window trim.
- Allow 1½" to 3" on each side of the window for when the drapes are completely open.
- Consider the amount extra wall space required for decorative finials. Rod dimensions do not include the additional width required for each finial.
- To make window appear larger mount the curtain rod 4" above the trim, extending the rod width 3" beyond the window's actual width.


LEVOLOR®

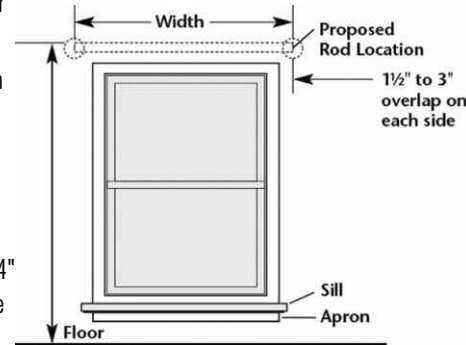

LAYERED TREATMENTS: Glass-side window treatment should be 1/2" shorter than the outer drapery, so under-treatment hems won't show.

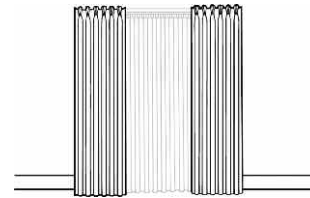

POCKET DEPTHS:

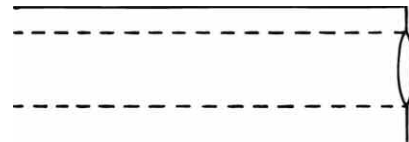

	Rod Diameter	Suggested Pocket Depth
Cafe Rods	7/16"	1"-1½"
Tension Rods	7/16"-3/4"	1"-1½"
Wide Pocket	2½"	3"
Curtain Rods	3/4"	1½"
Twist N Fit	1/2"	1"-1½"
Magnetic	1/2"	1"-1½"

Courtesy of Levolor®

Please read and follow all manufacturers' instructions for all tools and materials used. Provide adult supervision if children participate in this project. ©2011 Jo-Ann Stores, Inc. All rights reserved.

JO-ANN
fabric and craft stores®
P121-147 • 112-765

just ask Jo-Ann

basic window hardware guide




reorder: home dec hardware #4


more projects, tips & techniques at Joann.com®

free

WIDE POCKET RODS are used with valances or window curtain with top pocket hem of 3" or larger. This extra strong rod works well with heavy fabrics. Mounting hardware is included. Only available in white.

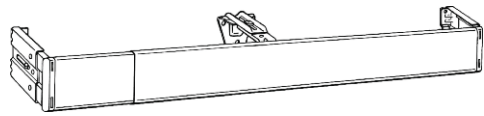


Wide Pocket Rod

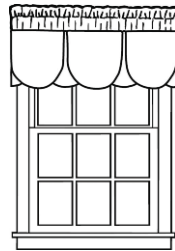


Wide pocket rod with valance

Wide Pocket Rod Installation:

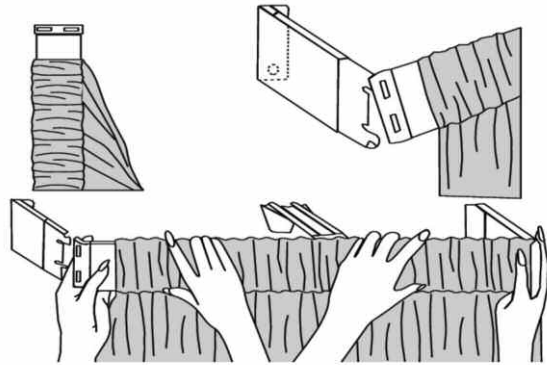


Wide pocket rod with drapery panel

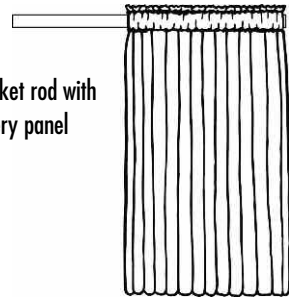


CURTAIN RODS are the most versatile option for finishing off your window project. They are adjustable and available in double rod sets for layered looks. Pair a decorative fabric over a sheer for extra privacy and light control.




Single Curtain Rod

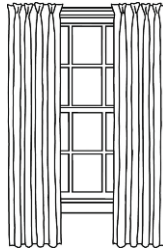

Curtain rod with goblet pleat panels

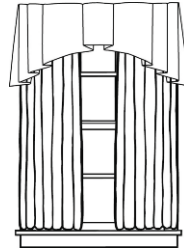


Double curtain rod with panel and valance

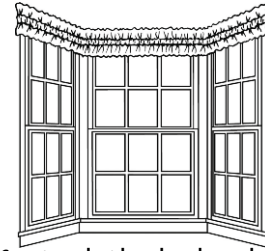

Curtain rod with rod pocket valance

Simple Curtain Rod Installation: Standard curtain rod projection is 2 1/2".

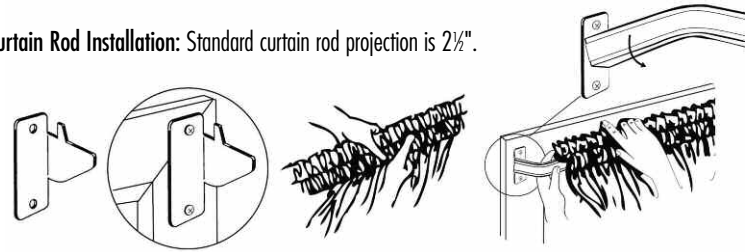

Use adjustable brackets to increase curtain rod projection.



SPECIALTY RODS:


DECORATIVE TWIST & FIT rods are used for sheers and other lightweight curtains. They combine the functionality of a tension rod with the look of a decorative rod. No tools required for installation.




Decorative Twist & Fit Rod




MAGNETIC RODS can be hung without tools. No screws or brackets required.

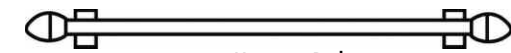

Magnetic Rod

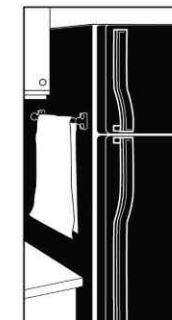

Use magnetic rods to hang towels on appliances.

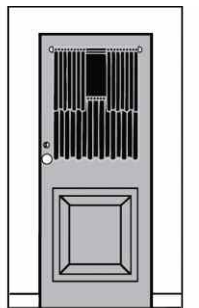

Magnetic rods are a smart solution for metal doors. No screws or brackets are required.